

## PSA PEUGEOT CITROËN - PŘEHLED ZNAČENÍ TYPŮ MOTORŮ

### Naftové motory E3-E4

9HY	9H01
9HZ	
9HV	
9HX	9H02 nebo
9HT	9H03
9HW	9H02
9HS	9H04
9HG	9H09
9HH	9H08
9HJ	9H08
9HK	9H08
9HE	9H08
RHR	RH01
4HS	4H01
4HT	
4HR	
4HP	
4HD	4H03
4HE	4H03
4HF	4H03

### Naftové motory E5

RHF	RH01
RHH	RH02
RHE	RH02
RHD	RH02
RHC	RH02
RHB	RH02
AHZ	RH02
AHY	RH02
4HL	4H02
X8Z	X801
X8Y	X801
9HR	9H05
9HP	9H06
9HN	9H06
9HF	9H06
9HL	9H05
9HM	9H07
9HD	9H05
9HC	9H05
8HR	8H01
8HP	8H01
4HG	4H03
4HH	4H03
4HJ	4H03

### Benzínové motory

8FR	8F01
8FP	8F01
5FS	5F01
5FX	5F04
5FR	5F04
5FV	5F02
5FU	5F03
HFV	HF01
KFT	KF01
5FP	5F05
5FW	5F05
5FN	5F02
5FL	5F07
5FM	5F06
5FK	5F01
5FJ	5F01
5FH	5F01
5FF	5F04

ZMZ	ZM01
HMZ	HM01
HMX	HM03
HMY	HM02
HMV	HM02
HMW	HM01
HMU	HM01
8FN	8F02
5FE	5F06
5FD	5F04
AFZ	AFZ
5FB	5F03
HNZ	HN01
HNY	HN02
5FC	5F06
5FG	5F08
5FA	5F02

Příloha k dopisu Peugeot z 18.6.2012